

RCA

Digital AM/FM Stereo Radio RP-1667

Service

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty in this guide.

Attach your sales receipt for future reference, or write down the date you purchased or received this product as a gift. This information will be valuable if service should be required during the warranty period.

Purchase Date _____
Name of Store _____

THOMSON CONSUMER ELECTRONICS
10330 N. meridian St., Indianapolis, IN 46290
©2000 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
55128710 (E/N/E)
www.rca.com

Federal Communications Commission (FCC) Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product.

Battery Installation

1. Open battery compartment by squeezing tab in and pulling up cover.
2. Install two "AAA" batteries (not included).
3. Replace battery door.

Important Battery Information

- Alkaline batteries are recommended.
- Rechargeable batteries may result in shorter playing time.
- Remove batteries if storing the unit for a month or more to avoid leakage.
- Dispose of batteries in the proper manner, according to federal, state and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type; if inserted incorrectly; if all batteries are not replaced at the same time; if disposed of in fire; or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately to avoid possible skin burns or other personal injury.

Caution/Care

Do not expose the unit to extreme temperatures, such as those caused by a hot stove or the inside of a car parked in the summer sun. Such conditions can damage the unit. Always clean with a soft cloth, dampened with water only.


Antennas

The headphone cord serves as the FM antenna. Because this antenna is directional, repositioning can improve reception.

The built-in AM antenna is somewhat directional. It may be necessary to slightly rotate the unit to strengthen weak AM signals.

HAVE A BLAST - JUST NOT IN YOUR EARDRUMS!

Make sure you turn down the volume on the unit before you put on the headphones. Increase the volume to the desired level only after headphones are in place.

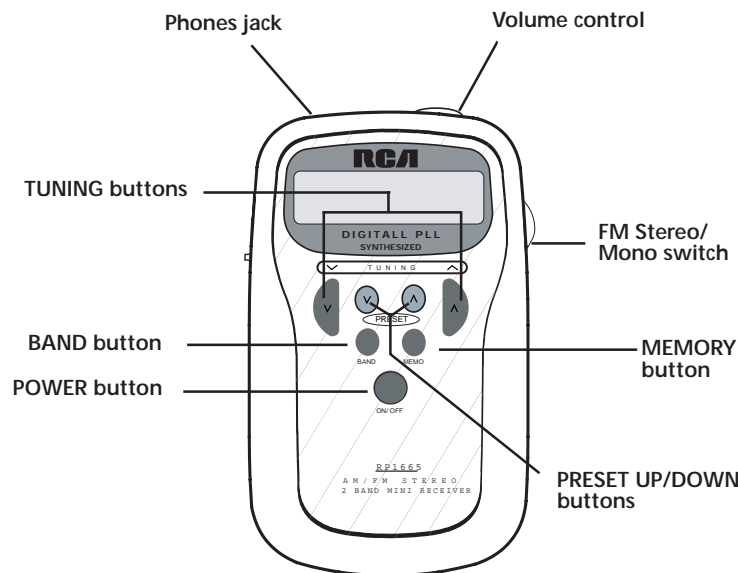

Radio Use

1. Press the **ON/OFF** button to turn the radio on and off.
2. Plug headphone cord into jack. Set volume to minimum level.
3. Press the **BAND** button to select a band. The display will show your choice.
4. To increment through the stations, press and release the up (^) or down (v) button until the desired frequency is displayed.

To scan through frequencies, press and hold the up (^) or down (v) button momentarily. When a clear signal is captured, scanning will automatically stop. To manually stop scanning, press up (^) or down (v) button again.

WEAK RECEPTION

If the reception of an FM station transmitting in stereo is weak, adjusting the headphone cord may help. If not, slide the **FM MONO/STEREO** switch to **MONO** to improve reception. In doing so, realize that you will no longer be listening to that station in stereo.

Preset Tuning

This unit can store up to 10 AM and 10 FM stations in memory.

1. Choose band and frequency as described above.
2. Press the **MEMO** button.
3. Within 5 seconds, press the **PRESET** ^ (up) or v (down) buttons to choose a preset location.

NOTE: Any information already stored in that location will be replaced.

4. Press the **MEMO** button again to lock the radio frequency choice into that preset location.

Recalling presets

To access the stations you have stored in the unit's memory, press and hold the **PRESET** ^ (up) or v (down) button to scroll through the preset locations until you find the desired station, or press and release the **PRESET** ^ (up) or v (down) button repeatedly to step through the preset locations one by one until you find the desired station.

NOTE: Stored memory items will be retained for no less than 4 minutes after battery removal.

Limited warranty

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.

**Product Exchange Centre,
11721 B Alameda Ave,
Socorro, TX 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.

- Insure your shipment in case of loss of damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.